Adjusting The Strap Length :
調節錶帶長度

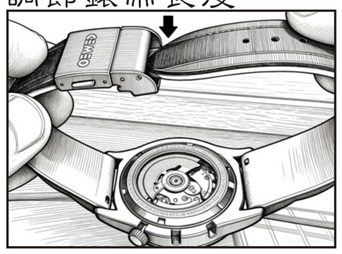
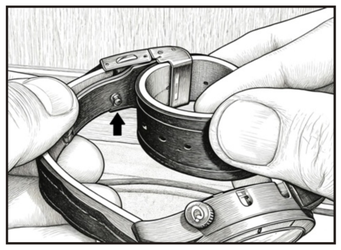
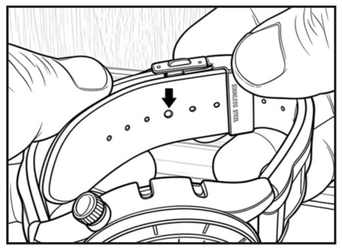

Insert the strap into the buckle, aligning the hole with the pin,then slip it on.
將錶帶插入錶扣,使錶帶孔與錶扣底部的插銷對齊,然後套上即可。

Changing The Strap :
更換錶帶

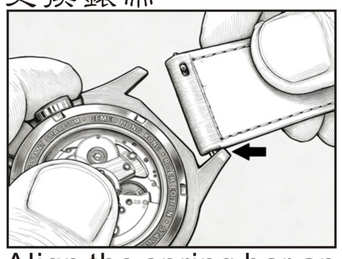
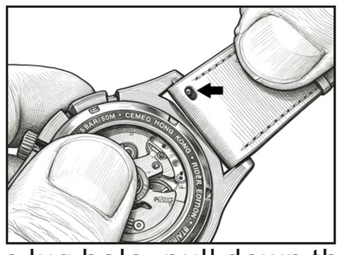

Align the spring bar and the lug hole, pull down the lever to fix the spring bar.
將彈簧桿與錶耳孔對齊,然後向下扳動槓桿以固定彈簧桿。

Time & Date Setting
設定時間與日曆

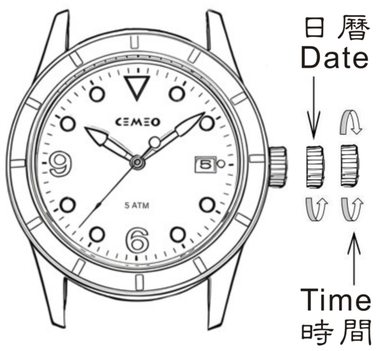

Date 日曆：

(1) Pull the crown out to the 1st position.
將錶冠拉出至第一檔

(2) Turn the crown counter-clockwise to set the date.
逆時針旋轉錶冠設定日曆

(3) After setting, push the crown back to the normal position.
設定日曆後,將錶冠推回原位

Time 時間：

(1) Pull the crown out to the 2nd position.
將錶冠拉出至第二檔

(2) Turn the crown to set hour and minute hands.
旋轉錶冠以設定時針和分針

(3) When the crown is pushed back to the normal position, second hand begins to run.
將錶冠推回原位後,秒針開始運作

CEMEO

Instruction Menu
使用說明書

www.cemeo.hk

Dial Position Change :
錶盤轉換位置

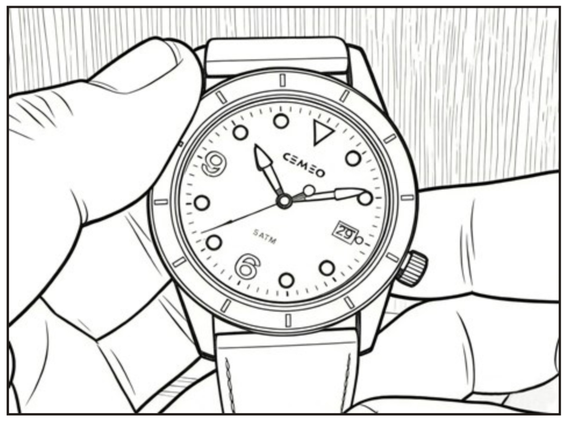

(1) The dial is preset to the 4 o'clock position.
錶盤預設於錶冠之4時位置

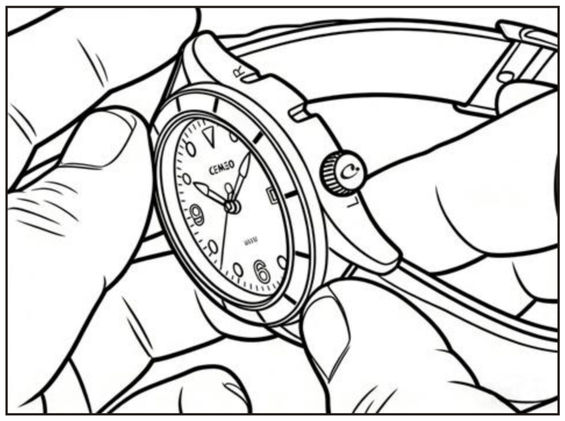

(2) Turn the watch to the side, and will see the crown at the 4 o'clock position.
將手錶側放，即可看到錶冠位於4時位置

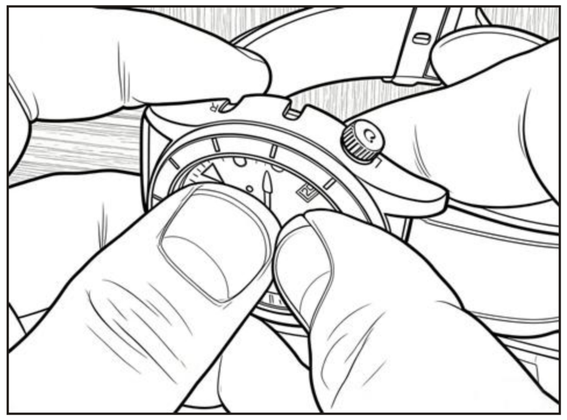

(3) Press your thumbs against the watch crystal and push out the inner case carefully.
小心用雙手的大姆指按在手錶的玻璃面上，把手錶內膽推出

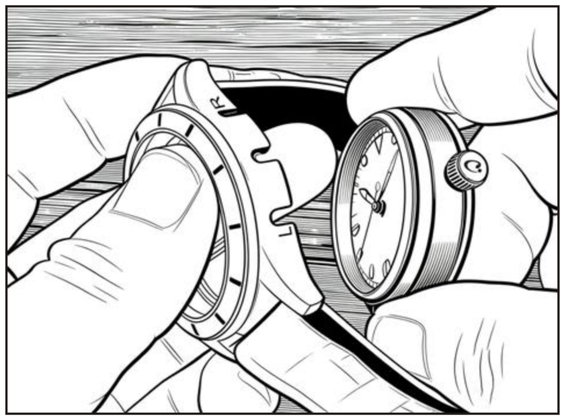

(4) Remove the inner case carefully.
小心把手錶內膽取出輕放

P.S. : Case marked letter “L” and “R”
“L” = for Left handers;
“R” = for Right handers.

註：錶殼上標有字母 "L" 和 "R"
"L" = 左手腕佩戴手錶
"R" = 右手腕佩戴手錶

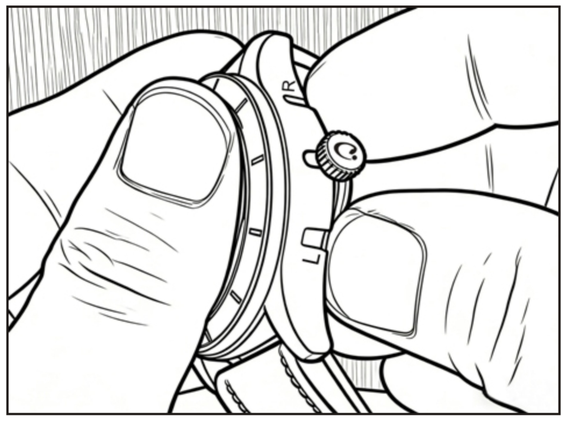

(5) Align the crown with the 3 o'clock position of the outer case, and push back the inner case into the outer case. A "click" sound indicates the dial position has been changed.
把錶冠對準錶外殼之3時凹位置,並把錶內膽推回錶外殼中,聽到"啪"一聲後,完成轉換錶盤位置.

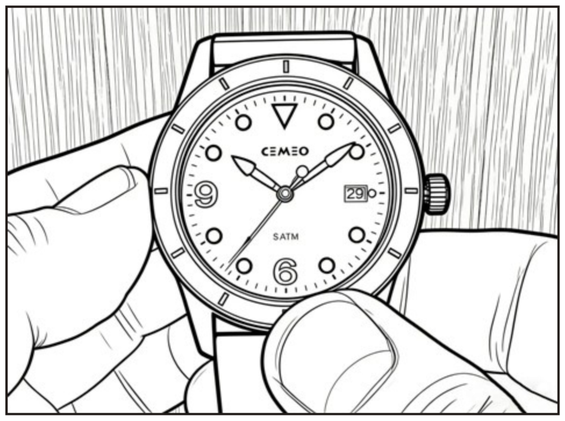

(6) The dial is now changed to the 3 o'clock position.
錶盤現在轉到了3時位置